




AMERICAN TELECASTER HS 0118600

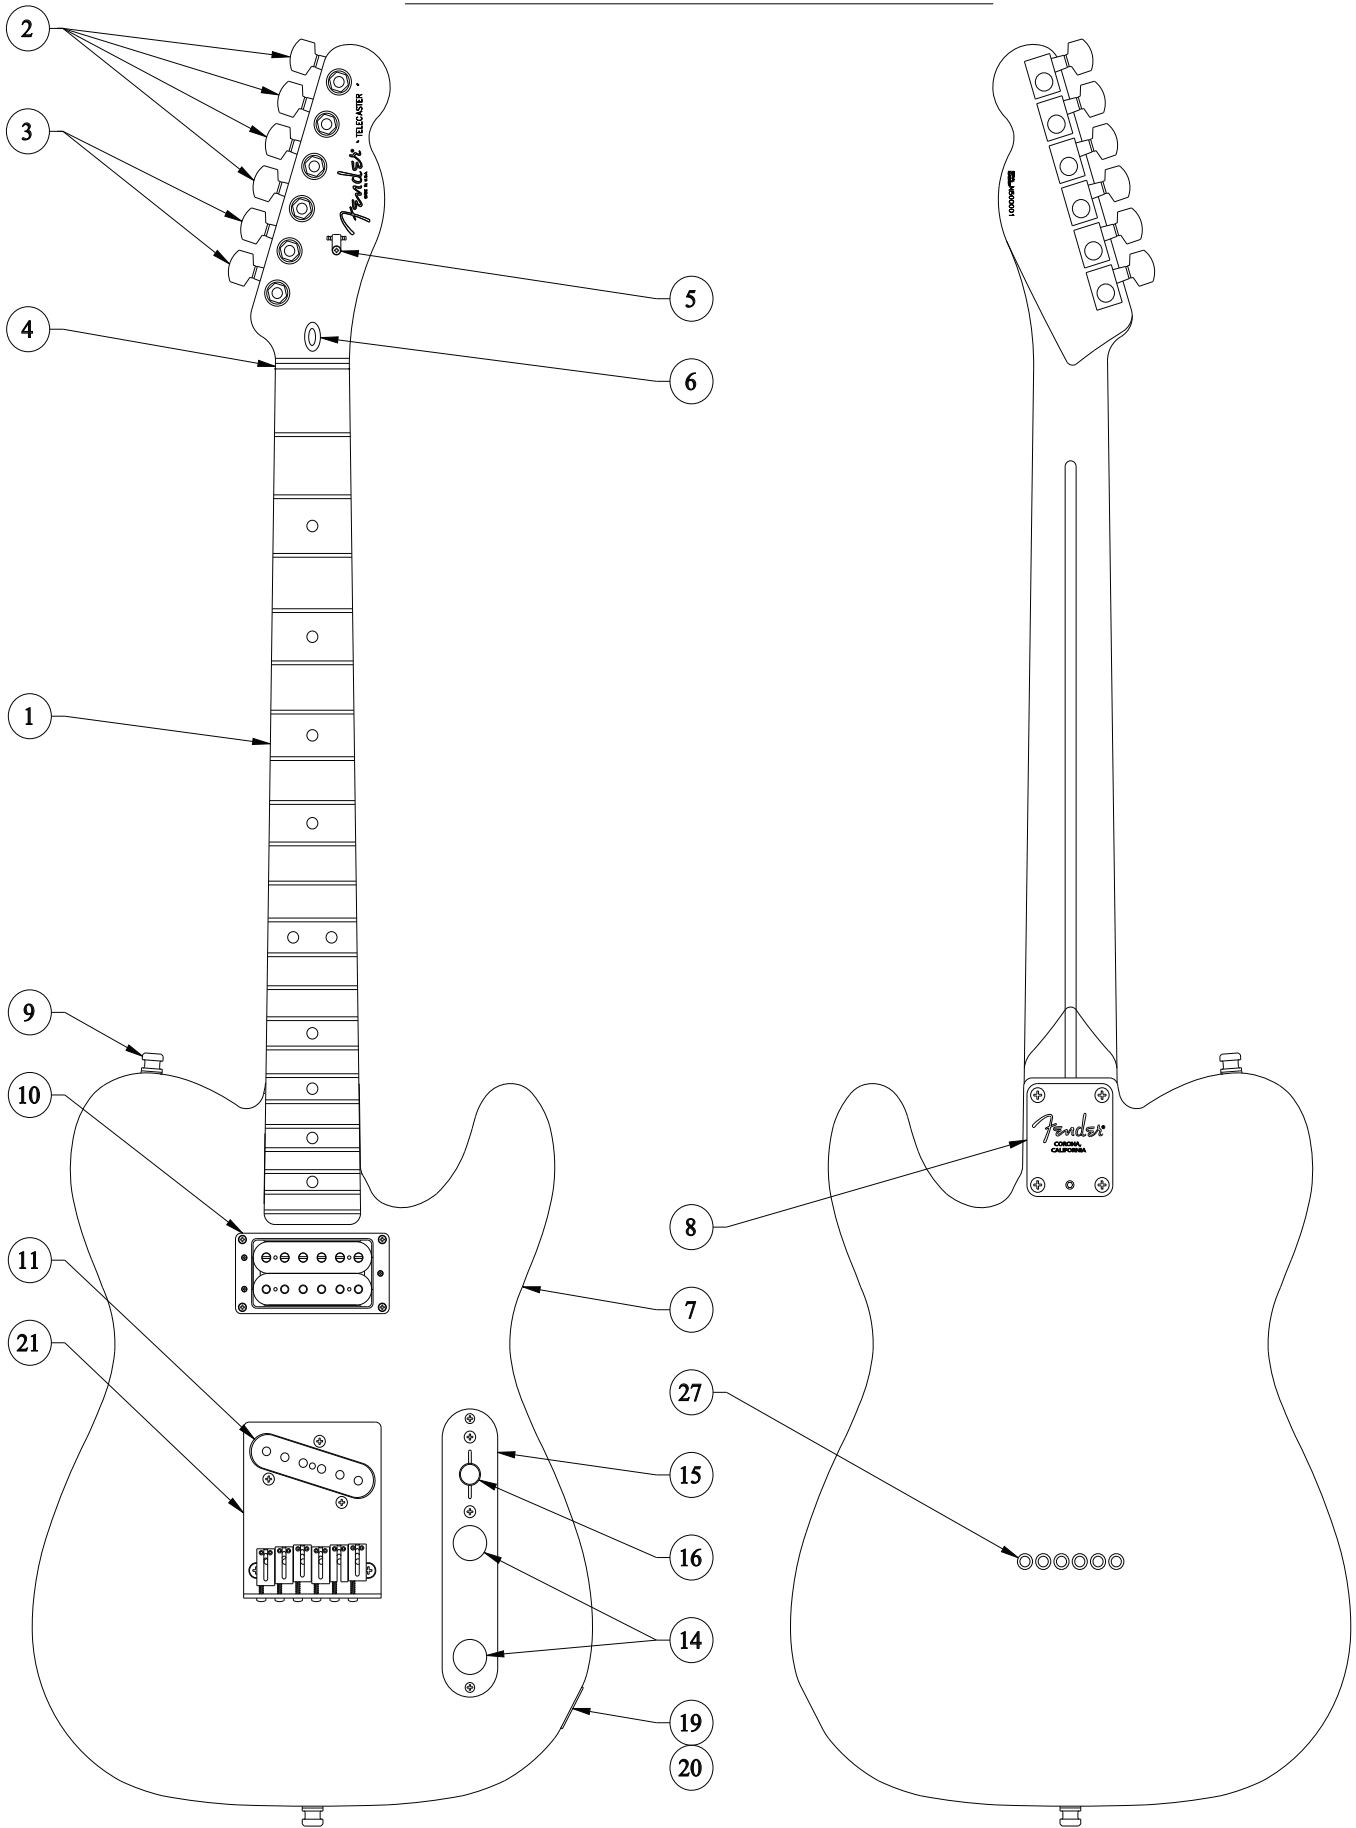

AMERICAN TELECASTER HS 0118600

 
 
 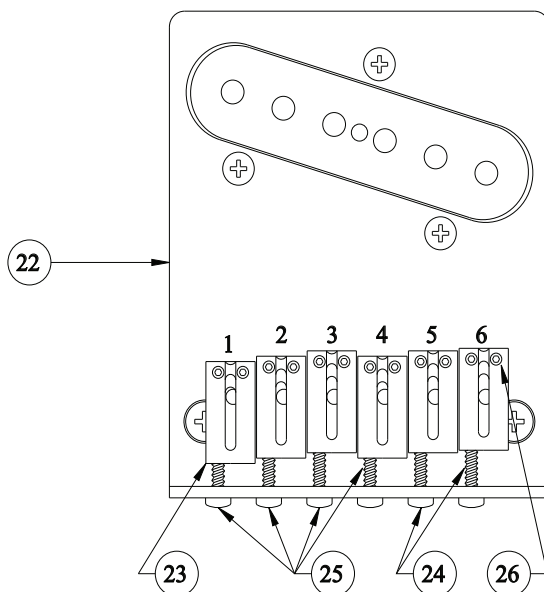


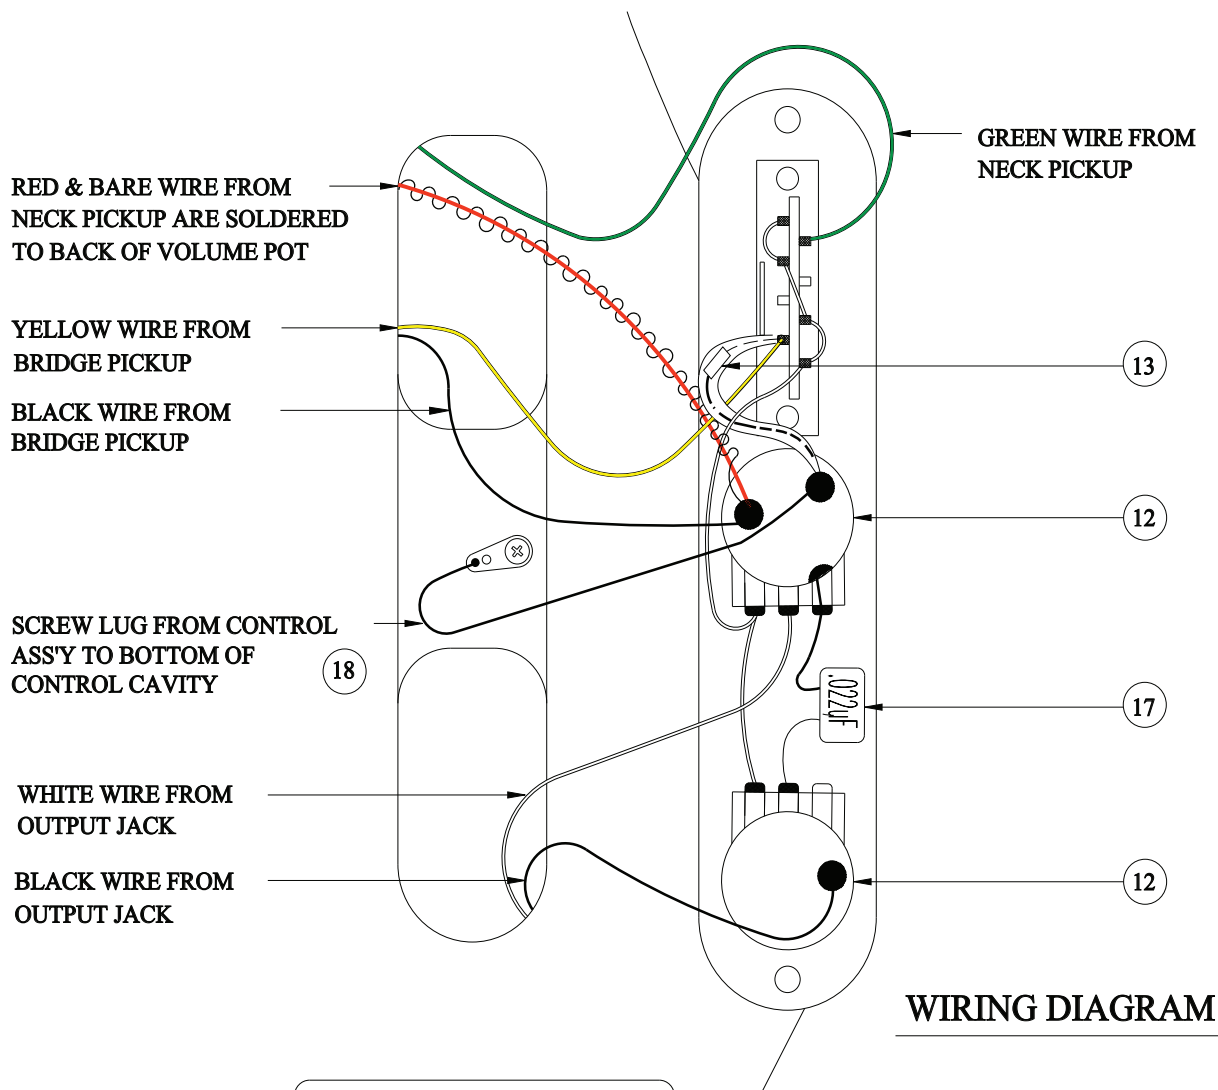





CONTROL ASSEMBLY



BRIDGE ASSEMBLY

AMERICAN TELECASTER HS 0118600

SWITCH & CONTROL FUNCTION

3 WAY SWITCH POSITION			
			← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
 PICKUP IS ON		 PICKUP IS OFF	

