 
 



Anderson 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

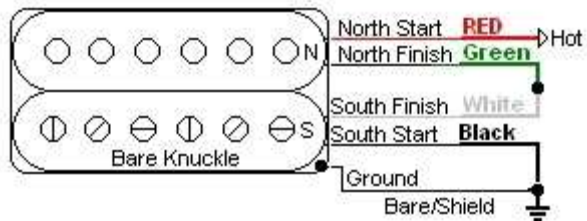


Bare Knuckle 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

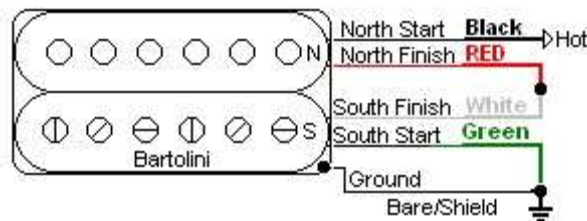

 
Bartolini Guitar & Bass 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

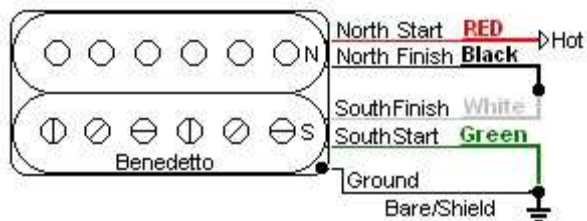


Benedetto 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

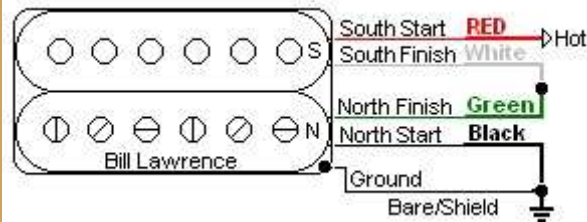 

 
Bill Lawrence 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is South magnetic polarity and screw pole coil is North magnetic polarity.

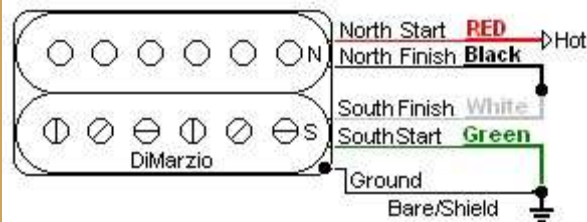


DiMarzio 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

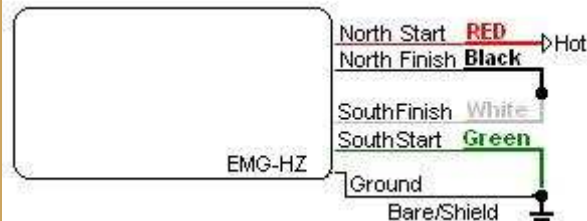 

 
EMG HZ 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Top coil is North magnetic polarity and bottom coil is South magnetic polarity.

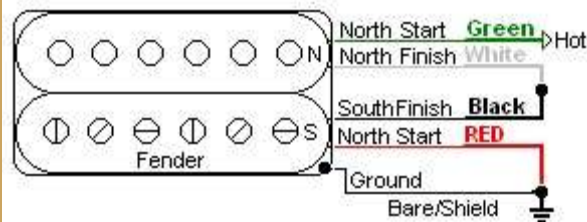


Fender 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

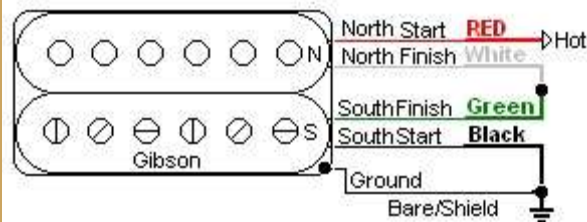 


Gibson 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

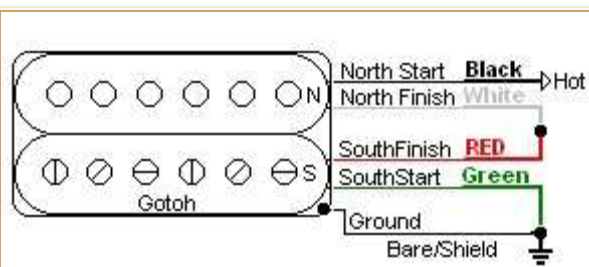 


Gotoh 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

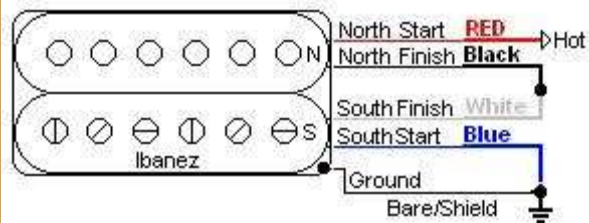 


Ibanez 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase) Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

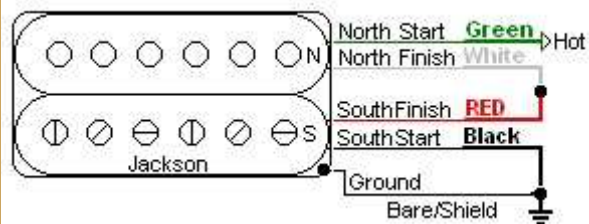 


Jackson 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

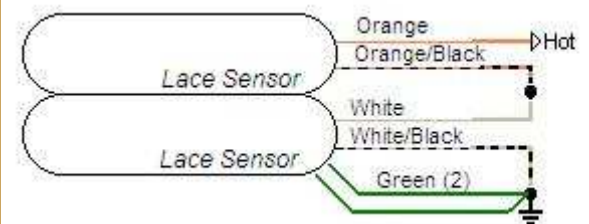 


Lace 4-Wire Dual Sensor Color Codes. Wiring shown for standard series dual mode (series/in-phase).

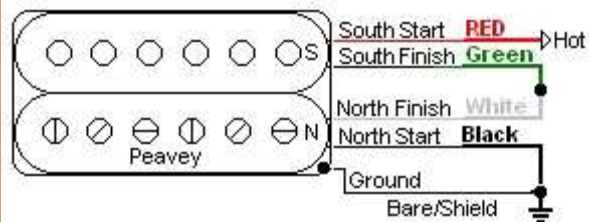 


Peavey 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is South magnetic polarity and screw pole coil is North magnetic polarity.

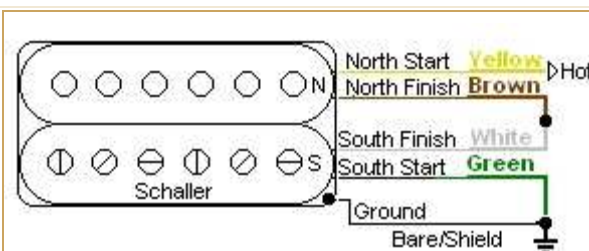 

Schaller 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

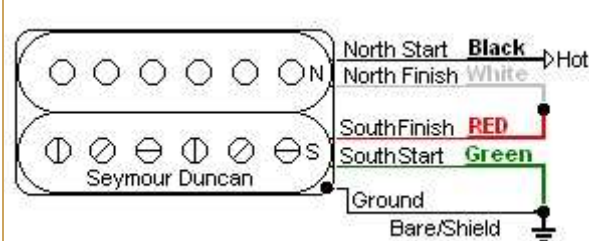 

 Seymour Duncan 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is North magnetic polarity and screw pole coil is South magnetic polarity.

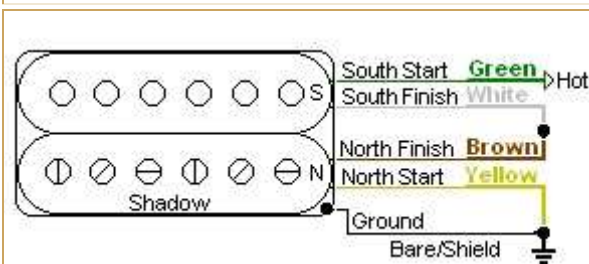

Shadow 4-Wire Humbucker Color Codes. Wiring shown for standard humbucking mode (series/in-phase). Slug pole coil is South magnetic polarity and screw pole coil is North magnetic polarity.