

AMERICAN DELUXE STRAT 3S UPGRADE 0101200/1202

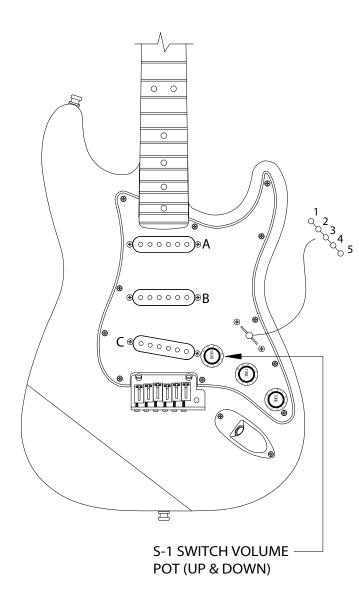

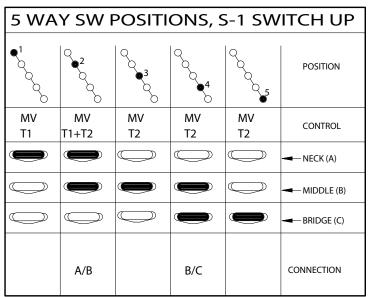

5 WAY SW POSITIONS, S-1 SWITCH DOWN					
•1	2	3	4	9 5	POSITION
MV T1	MV T1	MV —	MV T2	MV T2	CONTROL
					NECK (A)
					→ MIDDLE (B)
					BRIDGE (C)
A+B	(A/SC) + B	B+SC	B + (C/SC)	B+C	CONNECTION

MV = MASTER VOLUME

T1 = NECKTONE

T2 = MID/BRIDGE TONE

+ = SERIES CONNECTION


/ = PARALLEL CONNECTION

SC = SPECIAL CAPACITOR

	PICKUP IS ON	
	PICKUP IS OFF	
Α	PICKUP (NECK)	
В	PICKUP (MIDDLE)	
С	PICKUP (BRIDGE)	

AMERICAN DELUXE STRATOCASTER® 0101200/1202, RW/MN

SWITCH & CONTROL FUNCTION

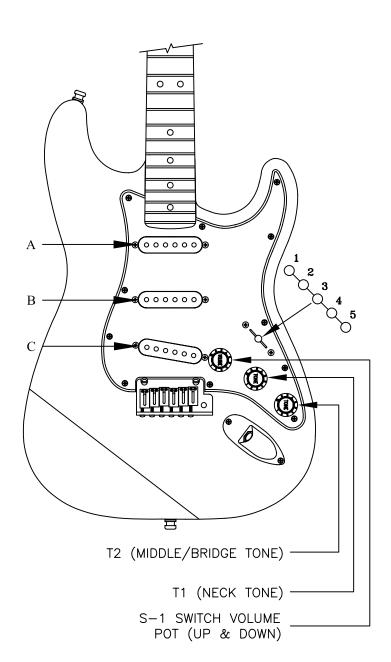

5 WAY SW POSITIONS, S-1 SWITCH UP					
•1 0 0 0	22000	300	00004	00005	POSITION
MV T1	MV T1+T2	MV T2	MV T2	MV T2	CONTROL
		0			→NECK (A)
					→ MIDDLE (B)
					→ BRIDGE (C)
	A/B		B/C		CONNECTION

5	5 WAY SW POSITIONS, S-1 SWITCH DOWN					
٩	1	2000	300	4	00005	POSITION
	MV T1	MV T1+T2	MV T2	MV T2	MV T2	CONTROL
0						NECK (A)
0						■ MIDDLE (B)
0						BRIDGE (C)
	A+B	(A/SC) + B	(A/C) + B	B + (C/SC)	B+C	CONNECTION

	PICKUP IS ON
	PICKUP IS OFF
A	PICKUP (NECK)
В	PICKUP (MIDDLE)
C	PICKUP (BRIDGE)

MV = MASTER VOLUME

T1 = NECK TONE

T2 = MID/BRIDGE TONE

+ = SERIES CONNECTION

/ = PARALLEL CONNECTION

SC = SPECIALS CAPACITOR

Pg. 4 of 4 5-6-2004 Rev. A