

Change Notice - Revision B - 11/12/06 - Changed the grounding locations

Change Notice - Revision C - 10/08/07 - Changed F2 Fuse location


Change Notice - Revision D - 1/05/08 - Removed Buss Ground From Pots

### BOM Reference Part Location

Resistors 1/2 watt or notated	Qty.	Reference Location
1 Ohm - 1% tolerance - 3 watt	2	R-CB-1 and R-CB-2
100 Ohms	1	R36
470 Ohms	1	R16
560 Ohms	1	R37
820 Ohms	1	R9
1k - 5 watt	2	R33-R34
2.2k	1	R35
2.7k	1	R1
4.7k	1	R23
5.6k	2	R31-R32
10k	2	R6-R20
10k - 3 & 5watt	3	R8 (3watt) R29 (5watt)
15k	1	R27
33k	1	R15
56k	1	R26
68k	1	R3
82k	1	R18
100k	6	R4-R7-R12-R13-R21-R22
220k (R30 - 3W)	3	R24-R25-R30
470k	3	R5-R10-R11
1M	3	R2-R17-R19

Capacitors	Qty.	Reference Location
47pf	1	C18
100pf	1	C2
470pf	3	C4-C8-C10
.001uf - (1000pF)	1	C5
.022uf	7	C3-C7-C9-C11-C12-C14-C16
.1uf	2	C15-C17
.68uf	1	C1
10uf - 100V	2	C19-C20
50uf + 50uf - 500V	3	C21-C22-C23

Other Various Parts	Qty.	Reference Location
Mains Transformer	1	*
Output Transformer	1	*
Input Jacks	2	J1-J2
1M Log	3	VR1-VR2-VR5
220k Log	1	VR3
22k Lin	2	VR4-VR6
25K Trim Pot	1	VR1
DPST Switch	1	S1
SPST Switch	1	S2
Voltage World Power	1	SEL. 1
Impedence	1	SEL. 2
Jacks - Non Switchig	3	J3-J4-J5
Fuses	2	F1-F2
Choke	1	*

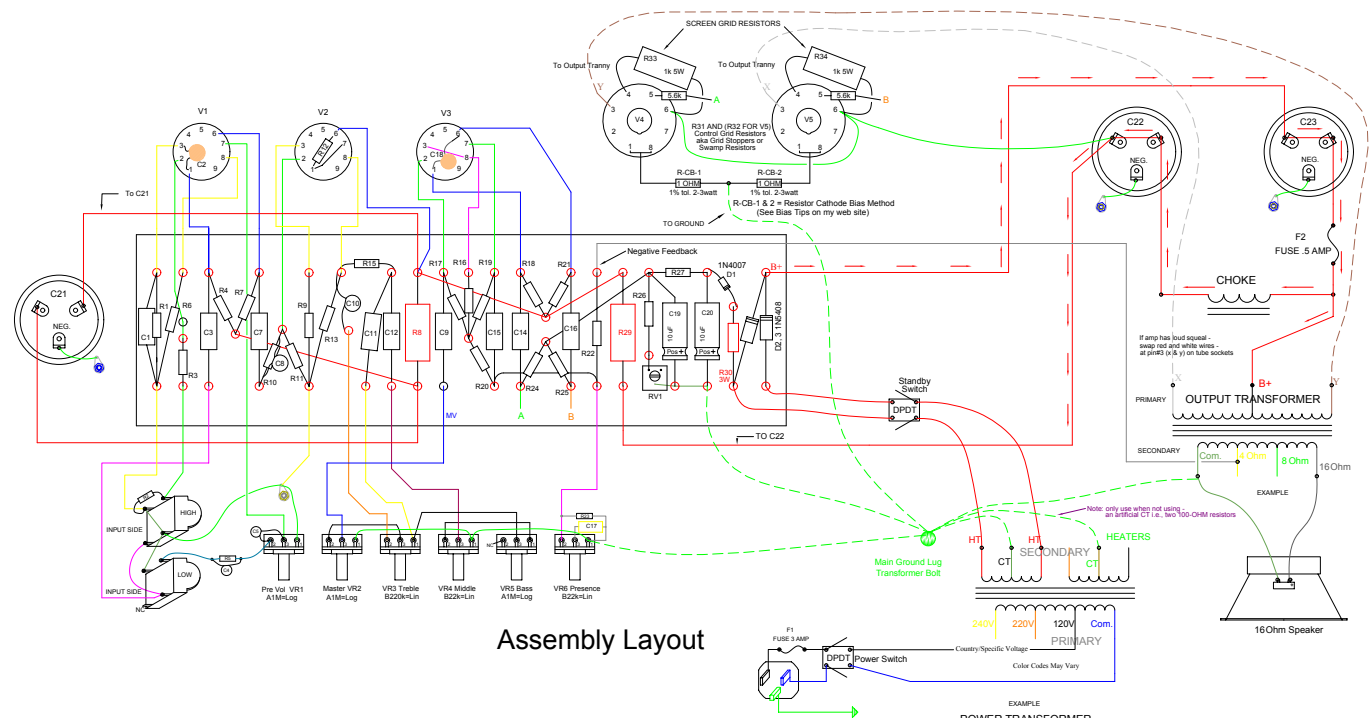

Assembly Layout

Marshall JCM800 2204 1998 Schematic

